

SIEMENS

Be inspired

ENGLISH

Gigaset C2

DECT



Brief overview

Talk/Handsfree key:

Top half:

- ◆ Answer a call
- ◆ Initiate dialling
- ◆ Switch from handsfree to "earpiece" mode

Bottom half:

- ◆ Switch from "earpiece" to handsfree mode
- ◆ Lights up: Handsfree is activated
- ◆ Flashes: Incoming call

Message key

- ◆ Access to Calls and Messages list
- ◆ Flashes: New messages or calls


Open directory

Key 1

Select network mailbox/ answering machine (press for approx. 2 sec.)

Star key

- ◆ Ringer on/off (press for approx. 2 seconds)
- ◆ When texting: Toggles between upper/lower case and digits

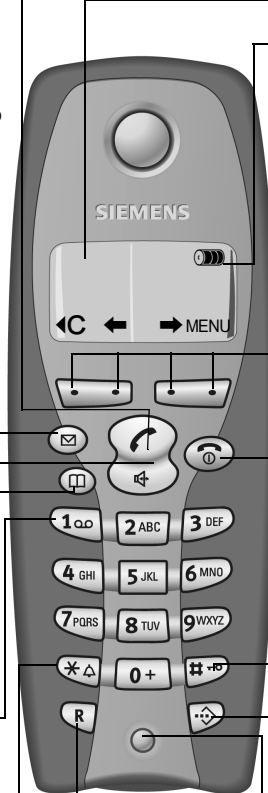

Display (display screen)

Charge status

- flat ○ fully charged
- flashes: battery is almost flat or is charging

Current functions and display keys

The display keys give you access to the functions shown in the display.

End call and On/Off key

- ◆ End call
- ◆ Cancel function
- ◆ One menu level back (press briefly)
- ◆ Back to idle status (press for approx. 1 second)
- ◆ Handset on/off (press for approx. 2 seconds)

Hash key

Keypad lock on/off (press for approx. 1 second)

Speed dial list key

Open speed dial list (press briefly)

Microphone

Recall key

Insert a dial pause (hold key down)

Contents

Brief overview	2
Safety precautions	5
Preparing to use your phone	6
Preparing to use the handset	6
Manual registration	7
Changing the display language	8
Changing the base	8
Attaching the belt clip	9
Activating/deactivating the handset	9
Activating/deactivating the keypad lock	9
Operating the telephone, menu overview	9
Display keys	9
Main menu	10
Date and Time	10
Setting the date and the time	10
Changing the time mode	11
Setting the alarm clock	11
Cancelling a wake-up call	12
Setting an appointment	12
Making calls	13
Making external calls and ending a call	13
Internal calls, ending a call	13
Answering a call	13
Handsfree	13
Muting the handset during an external call	14
Directory and speed dial list	14
Storing a telephone number in the directory	14
Storing a telephone number in the speed dial list	15
Managing entries in the directory and speed dial list	15
Linking a call-by-call number with a phone number	16
Last number redial list	16
Viewing the calls and messages list	17

Contents

- Using several handsets 17**
 - Internal consultation calls 17
 - Accepting/rejecting call waiting during an internal call 17
 - Using a handset as a room monitor 17
 - Setting the Walk and Talk mode 19

- Handset settings 19**
 - Activating/deactivating Auto Answer 19
 - Adjusting the loudspeaker volume 20
 - Changing the ringer tone 20
 - Activating/deactivating advisory tones 20
 - Restoring the handset factory settings 21

- Appendix 22**
 - Care and contact with liquid 22
 - Service (Customer Care) 22
 - Specifications 23
 - Character set chart 23
 - Predictive text 24
 - Warranty Certificate Ireland 25

- Index 26**

Safety precautions



Only use **the power supply unit supplied**, as indicated on the underside of the device.



Fit only the **recommended rechargeable batteries (page 23)** of the same type! Use no other types of batteries or non-rechargeable batteries, as they could damage health and cause personal injury.



Ensure correct polarity when fitting rechargeable batteries, and use the battery type according to these instructions (you will see polarity symbols in the handset's battery compartments).



The operation of medical appliances may be affected. Be aware of the technical conditions within the particular environment (e.g. doctor's practice).



The handset may cause an intrusive 'hum' in hearing aids.



The handset is not watertight (page 22).



Drivers must not use their phones while driving (Walk and Talk function).



Switch off your phone while on board an aircraft (Walk and Talk function). Ensure that it cannot be switched on again accidentally.



Do not use the phone in environments subject to explosion hazard (e.g. auto paint shops).



Ensure that your Gigaset is accompanied by these instructions when you give it to others to use.



Dispose of the batteries and phone in accordance with environmental regulations.

i

Not all of the functions described in these instructions are available in all countries.

Preparing to use your phone

The pack contains:

- ◆ one Gigaset C 2 handset,
- ◆ one charging shell,
- ◆ one belt clip for the handset,
- ◆ two batteries,
- ◆ one power supply unit with power cord,
- ◆ one set of operating instructions.

Preparing to use the handset

The display is protected by a plastic film. **Remove the protective plastic film!**

Inserting the batteries



 
- ◆ Insert the batteries **ensuring correct polarity** – see figure on left.
- ◆ Position the battery cover so that it is **open by around 3 mm**, then slide **up** until it closes with a click,
- ◆ **To open** the battery cover, press on the chequered area and slide **down**.




Use only the rechargeable batteries recommended by Siemens on page 23! Never use conventional batteries (non-rechargeable) or other battery types as this may cause significant damage to health and property. For example, the jacket of the battery could be destroyed (hazardous). The phone could also malfunction or be damaged.

Placing the handset into the base (registering) and charging the batteries

When you place the C 2 handset into the C 200/C 250, C 100/C 150 or S 100/S 150 base, it will register to the base **automatically**. Proceed step by step as follows:

1. Place the handset in the base with the **display up**.
2. Wait till the handset has registered automatically to the base: This operation takes **around one minute**. While registration is in progress the screen displays **Registering** and **Base 1** flashes. The allocated internal number appears in the top left of the display after registration.
3. Now leave the handset in the charging shell for the batteries to charge - the batteries are supplied uncharged. Battery charging is indicated in the top right of the display by the flashing battery icon .

	For the initial charge we recommend a continuous, uninterrupted charging period of five hours, whatever charge status is indicated. After a while the charge capacity of the batteries will decrease for technical reasons.
---	---

The battery charging status is correctly displayed only after **uninterrupted charging/discharging**. You should therefore avoid removing the batteries unnecessarily and ending the charging process prematurely.


<i>i</i>	<ul style="list-style-type: none">◆ Once initial charging is complete, you can replace your handset in the charging shell after each call. Charging is controlled electronically. This ensures that the batteries are charged in a way that maximises their life.◆ The batteries heat up during charging. This is normal and not dangerous.
----------	--

Manual registration

If automatic registration is interrupted or if you wish to use your C 2 handset at a different Gigaset base (1000, 2000, 3000 or 4000 family), then you must register it **manually**. You must initiate handset registration on the handset and on the base.

Preparing to use your phone

1. On the handset

MENU	Press the display key to open the menu.
↓ Handset Settings OK	Select the menu item and confirm.
↓ Register Handset OK	Select the menu item and confirm.
↓ Base 2 OK	Select base (1–4) and confirm, e.g. Base 2 .
 OK	Enter the system PIN of the base (the default is 0000) and confirm.


Base 2 flashes in the display when the system PIN has been entered.


 
2. On the base

Please refer to the operating instructions for the base to find out how to prepare the base for registration.

Changing the display language

You can view the display texts in different languages.

MENU	Press the display key to open the menu.
↓ Handset Settings OK	Select the menu item and confirm.
↓ Language OK	Select the menu item and confirm. The current language is checked ✓ (the default language is English).
↓ OK	Select a language and confirm.
	Long press (back to idle status).


If you set the wrong language in error, press **MENU**  . Now select the correct language with ↓ and press **OK** to confirm your choice.

Changing the base

If your handset is registered to more than one base, you can set it to a particular base or to the base that has the best reception (**Best Base**).


MENU; ↓ **Handset Settings OK**; ↓ **Select Base OK**; ↓ (select a base or **Best Base**) **OK**


Attaching the belt clip

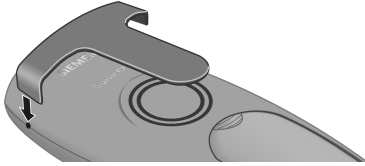

Push the belt clip onto the back of the handset until the lugs click into the recesses on either side of the handset.


 
Activating/deactivating the handset

To **activate** the handset press the 'end call' key  **and hold**.

To **deactivate** the handset, press the 'end call' key  again in the idle status **and hold**.

The handset activates automatically when placed in the charging shell.

Activating/deactivating the keypad lock

You can lock the keys on your handset by **pressing and holding** the hash key  (confirmation tone; you see the  icon in the display) and unlock them by **pressing and holding** the hash key again.

The keypad lock deactivates automatically when you receive a call. It re-activates when the call is finished.


i

When the keypad lock is active, you cannot even call emergency numbers.

Operating the telephone, menu overview

Display keys

 


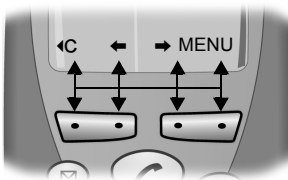




The display keys are the **horizontal rocker keys** just below the display. Depending on the particular operating situation, their function changes according to whether you press the left or right side of the key. The current function is shown in the display **directly above** the key to which it relates. Here is a typical example:




Display keys

Date and Time

The various symbols have the following meanings when the keys are pressed:


	Last number redial key: Open the list of the last 10 numbers you dialled.
	INT key: Open the list of handsets when in idle status.
	OK key: Confirm menu function or confirm an input and store.
	Menu key: Open the main menu when in idle status Open a status-dependent menu while making a call.
	Scroll up / down.
	Move cursor left / right.
	Access to wake-up function.
	Delete key: Delete input from right to left one character at a time.

Reverting to idle status from anywhere in the menu

Press the 'end call' key  for around 1 second, or press no key: The display **automatically** reverts to the idle status after 2 minutes.

Changes which you have not confirmed/stored by pressing **OK** will be rejected.

Main menu




 

 

 


 





To open the main menu, with the telephone in **idle status** press the display key **MENU** and scroll to the required option using .

1	SMS	
2	Select Services	
3	Additional Features	The menu options that are available will depend on your base.
4	Calender/Clock	
5	Audio Settings	
6	Call Charges	
7	Handset Settings	
8	Base Settings	
9	Voice Mail	

Date and Time

Setting the date and the time

Correct date and time settings are essential if you want to know exactly when calls were received.

MENU	Open the menu.
 Calender/Clock OK	Select the menu item and confirm.
 Date/Time OK	Select the menu item and confirm.
 OK	Enter the date and confirm. Example: For 1.5.2003, enter       .
 OK	Enter the time and confirm. Example: For 9.35, enter     .
 OK	With the 12-hour display, select a.m. or p.m. and confirm.
	Long press (back to idle status).

 appears on the bottom line of the display.

Changing the time mode


You can choose between the 12 or 24 hour display (the factory setting is 24 hour).

MENU;  **Calender/Clock OK;**  **Time Mode OK;**  (select display) **OK** (✓ = On);
 **long press** (back to idle status).

Setting the alarm clock

Precondition: The date and time have already been set (page 10).




Activating/deactivating the alarm clock


Activate: ; **Alarm Clock OK;** (✓ = On).


To deactivate: ; **Alarm Clock OK;** (✓ disappears).

Setting the wake-up time

Activate the alarm clock.


 OK	Enter the wake-up time and confirm. The top line of the screen displays the alarm clock icon  .
	Long press (back to idle status).

If you are using the 12 hour clock display, select a.m. or p.m. with  and confirm (✓ = On).

A wake-up call only sounds when the handset is in the idle status and the room monitor function or Walk and Talk is not activated. When you deactivate the alarm clock the  icon will only go out if there is no active appointment.

i	To find out how to set the wake-up volume and melody, turn to page 20.
----------	--

Cancelling a wake-up call





 

 


 (press any key). The alarm clock is still switched on.

Setting an appointment

To set an appointment you must enter and store the required date and time.


Activating/deactivating the appointment function

MENU; ↓ **Calender/Clock OK;** **Set Appointment OK** (✓ = On).


	Confirm again if an appointment is activated.
 	Enter the date and confirm.
 	Enter the time and confirm.
 	Enter a name for the appointment (up to 16 characters long) and confirm (for inputting text see page 23).
	Long press (back to idle status). The top line displays the alarm clock icon  .

The handset will only display an appointment when it is in the idle status. An appointment is not displayed when the room monitor or the Walk and Talk function is active.

If you are using the 12 hour clock display, select a.m. or p.m. with ↓ and confirm (✓ = On).

	To find out how to set the wake-up volume and melody, turn to page 20.
---	--

Deactivating an appointment call

Press the display key **OK**. The alarm clock icon  disappears when the alarm clock is not activated.

Cancelling an appointment

MENU; ↓ **Calender/Clock OK;** **Set Appointment OK** (✓ disappears).

Viewing an appointment you have not kept


If the handset reminds you of an appointment but you do not keep it, a message appears in the display together with the name of the appointment. Press **any key** to cancel the message.

Making calls



Making external calls and ending a call

External calls are calls into the public telephone network.


 (enter the number), press  (Talk/Handsfree key).

To **end the call**: press  ('end call' key).

i

- ◆ You can also press the Talk/Handsfree key  **first** (you hear the dialling tone) and then enter the number.
- ◆ You can use the end call key  to cancel the dialling operation.

Inserting a dialling pause


You can insert a dialling pause between the prefix and the actual telephone number. To do this, press  for around 2 seconds. Now enter the telephone number.

Internal calls, ending a call



Calls to other handsets that are registered to the same base are free of charge.

Calling a specific handset



Press **INT**;  (select handset) . **Or**: press **INT**  (example)

To **end the call**: Press the 'end call' key .

Calling all handsets ('group call')

Press **INT** and . To **end the call**: Press the 'end call' key .



Answering a call


Your handset rings, the call is displayed on the screen and the handsfree key  flashes. Press  (top half of the key).

If the **Auto Answer** function is activated (page 19) you just need to lift the handset out of the charging shell to take the call.


Handsfree

Activating/deactivating handsfree

Before you dial:  (enter the number); press  (bottom half of the key).

During a call: press  (bottom half of the key).

To **deactivate**: press  (top half of the key).




If you wish to place the handset in the charging shell during a call you must press the bottom half of the  key and hold it down while you position the handset in the shell.

i

You should inform your caller that you intend to use the handsfree function before you activate it.

Directory and speed dial list

Adjusting the volume while in handsfree mode during a call

	Press the bottom half of the key again .
	Decrease or increase the volume.
	Now press the display key to store the setting.

 
Muting the handset during an external call


Press **INT**. The call is 'held' (wait melody).

To end the call: ↓ *****Back***** **OK**.

Directory and speed dial list

You can store up to 100 numbers in the directory and the speed dial list.

The **directory** makes dialling easier for you. You open the directory with the  key. You can mark any directory entry as 'VIP'.


 




The **speed dial list** is a special directory in which you can store particularly important numbers such as private telephone numbers and prefixes of network providers (so-called 'call-by-call numbers'). You open the speed dial list with the  key.

The speed dial list is operated in just the same way as the directory, except for the way in which entries are stored.


- ◆ The **EATONI** predictive text helps you input names (page 24, this feature is deactivated when you purchase your phone).
- ◆ Please refer to the **Character Set Chart** (page 23) to see how to enter text correctly.
- ◆ You can enter up to 32 digits for a number and up to 16 letters for a name.
- ◆ Turn to page 13 for instructions on how to insert a dialling pause.


Storing a telephone number in the directory






 (open directory); **MENU**; **New Entry OK**.

 	Enter the number and confirm.
 	Enter the name and press the display key.
Save Entry 	Confirm. The entry is stored.
	Long press (back to idle status).

Storing a telephone number in the speed dial list



 

You can assign a digit (0, 2–9) to **up to nine** entries on your speed dial list. When you press and hold one of these digits, e.g. '3', and press the top half of the  key you are immediately connected to the telephone number that is assigned '3'.


 



 (open speed dial list); **MENU**; **New Entry OK**.

 OK	Enter the number and confirm.
 MENU	Enter the name and press the display key.
Save Entry <input type="text"/> OK	Confirm. The entry is stored.
MENU	Press the display key to open the menu.
 Shortcut <input type="text"/> OK	Select the menu item and confirm.
 Shortcut: 2 <input type="text"/> OK	Select the digit and confirm.
	Long press (back to idle status).


 
 
 
Speed dial digits cannot be assigned more than once at a time.


 
Dialling with the directory/speed dial list

 or  (open directory or speed dial list);  (select an entry); .

Or:  or ;  (enter first letter, or scroll using ); .

Managing entries in the directory and speed dial list

To use one of the following functions, just press the directory key  or the speed dial list key . Then with the display key  select the directory or speed dial list entry and press **MENU** to open the list. Use the  key to scroll to the menu function you require.

New Entry	
Use Number	
Edit Entry	
Delete Entry	
VIP Entry	For the directory only ()
Copy and Edit	For the directory only ()
Send Entry	
Delete List	
Send List	

Directory and speed dial list




The 'Mark as VIP' and 'copy and edit' functions


 

 

 

You can mark the directory entries of particularly important callers as **VIP** (Very Important Person); this links a particular melody to them. You can then tell who is calling you from the ringer melody. **Precondition:** The caller's number has been identified.

So that you do not have to enter a similar entry twice, you can create a **copy** and then **edit** that entry.

Sending a single entry or complete list to a handset

You can send individual entries or the entire list to another C 2 or S 1 handset or a Comfort handset in the Gigaset 4000, 3000 or 2000 series that is registered to the same base. VIP settings and speed dial (shortcut) digits are not sent.





 or  (open directory or speed dial list);  (select an entry); **MENU**.

 Send Entry 	Select the menu item and confirm.
or ...	Send complete list:
 Send List 	Select the menu item and confirm.
... then	
 INT 2 	Select the handset to which you wish to send the entry or list and confirm, e.g. handset 2. Your selections are sent to that handset.
	Long press (back to idle status).

Linking a call-by-call number with a phone number

This function can be used to put a network provider's prefix (which is stored in the speed dial list) in front of the telephone number ('linking').

 


 (open speed dial list);  **MENU**; **Use Number OK**.

	Open the directory.
 	Select the number and confirm.
	Press the Talk/Handsfree key.

Last number redial list

The last number redial list contains the ten last dialled numbers.

Dialling telephone numbers from the last number redial list


 (open last number redial list);  (select an entry); .

Managing entries in the last number redial list

→ (open last number redial list); ↓ (select an entry); **MENU**



Use Number
Copy to Directory
Delete Entry
Delete List

Viewing the calls and messages list


New calls/messages are indicated by a message in the display. Press the message key  to view the corresponding list.

Using several handsets

Transferring a call to another handset

Press **INT**, select ↓ (handset) or **Calling all**, press  (top half).
The internal user answers: press  ('end call' key).

Internal consultation calls

You can make an **internal** call while an **external** call is in progress.
Press **INT**; ↓ (select handset); press  (top half of the key).
To **end the call**: **MENU**; **Back OK** (back to the outside caller).

Accepting/rejecting call waiting during an internal call

If you get an external call while conducting an **internal** call, you will hear the call waiting tone (short tone).

To accept the call: **MENU**; **Accept Call Waiting OK**
(you speak to the outside caller).

To reject the call: **MENU**; **Reject Call Waiting OK**
(you speak to the internal caller).

The rejected call waiting tone can still be heard at other handsets.

Using a handset as a room monitor

With this function, a previously stored internal or external number is called when a set noise level in the room is reached (the baby cries). When you answer the call you hear the noise in the baby's room. The room monitor **remains activated** on the handset even after you hang up.


The handset should be between 1 and 2 metres away from the baby. The microphone must be directed towards the baby.

When the room monitor is activated, incoming calls to the handset which is near the baby are indicated **without a ring tone**, they are just shown on the display.

When entering an external phone number, make sure that the line to which you want the room monitor to be transferred is not blocked by an activated answering machine.

Using several handsets









- ◆ If you redirect your room monitor to an external number, then you should tell that number's owner.
- ◆ The room monitor's call to an **external** phone number stops after about 90 seconds, to an **internal** number (handset) it stops after about 180 seconds (depending on the base).

	Always check the settings of the room monitor before you leave home, e.g. sensitivity and phone line.
---	--

<i>i</i>	The room monitor function severely curtails the handset's operating time. If necessary you should place the 'room monitor handset' in the charger to ensure that the battery does not run down.
----------	---

Activating the room monitor function and entering the 'call to' number for the first time



MENU; ↓ Additional Features OK; Room Monitor OK.

 Call Internal 	Select the menu item and confirm.
 	Select the handset and confirm.
or ...	Enter an external number as the 'call to' number:
 Call External 	Select the menu item and confirm.
 	Enter the number and confirm.

 
 
If the room monitor is activated, you go straight to the room monitor setting when you press the display key **MENU** (open menu).

Setting the room monitor's sensitivity

MENU; ↓ Additional Features OK; Room Monitor OK; ↓ Level Features OK.

 	Select Low or High and confirm.
---	---

Deactivating the room monitor

To turn the room monitor off from **outside** (depends on the base), take the call that the room monitor has initiated, and press  . The room monitor function will deactivate around 90 seconds after the call ends. The room monitor will make no further calls. The other room monitor functions on the handset (e.g. no ringer) will remain activated until you press **MENU** and **OK** on the handset that is in the baby's room.

Setting the Walk and Talk mode

The Walk and Talk function allows two C 2 handsets (maximum range 300 metres) to call each other no matter how far they are from the base.

Precondition:

- ◆ Both handsets have been registered to the same base **or**
- ◆ Both handsets are registered to different bases and both are set to **Best Base** (page 8) **or**
- ◆ One of the handsets is not registered to any base and the registered handset is set to **Best Base or**
- ◆ Neither handset is registered to a base.

<i>i</i>	<p>In Walk and Talk mode</p> <ul style="list-style-type: none"> ◆ The handsets cannot be reached by incoming calls, ◆ Handset operating times are severely curtailed.
----------	---

Activating/deactivating the Walk and Talk mode

MENU; ↓ Additional Features OK; ↓ Walk and Talk OK.

To deactivate: **MENU; ↓ Walk and Talk Off OK.**

Ring and advisory tones are set in exactly the same way as if your handsets at home were in range of the base (page 20 and page 21).


'Activate/deactivate ringer' (page 20) and 'Activate/deactivate keypad lock' (page 9) are available in the Walk and Talk mode.

<i>i</i>	<p>The Walk and Talk mode is retained even when you switch your handset off and back on.</p>
----------	--


Handset settings

Your handset is preset. You can change the settings to suit your requirements.

Activating/deactivating Auto Answer

With this function you simply lift the handset out of its charging shell when a call arrives - there is no need to press  (the default is On).


MENU; ↓ Handset Settings OK; Auto Answer OK (✓ = On);

press  **and hold** (return to idle status).

Handset settings

Adjusting the loudspeaker volume

You can adjust the earpiece volume on three levels (1–3) and the handsfree volume on five levels (1–5) – you can even do this while an external call is in progress.

MENU; ↓ Audio Settings OK; Earpiece Volume OK; → (select volume) **OK** or
MENU; ↓ Audio Settings OK; Handsfree Volume OK; → (select volume) **OK**;
press  **and hold** (return to idle status).

Changing the ringer tone


You can set the ringer volume individually for a call, for a wake-up call or for an appointment. There are six different volumes and ten melodies for you to choose from.

Changing the ringer melody

MENU; ↓ Audio Settings OK; ↓ Ringer Melody OK; ↓ (select function) **OK**.


If you set all ringer tones the same, then the current setting will be used **automatically** for external calls: To do this, select **All Ringer Tones** and confirm **twice** with **OK**.


Adjusting the ringer volume


MENU; ↓ Audio Settings OK; ↓ Ringer Volume OK; → (select volume) **OK**;
press  **and hold** (return to idle status).

Activating/deactivating the ringer

All handsets ring when there is an incoming call.

Cancelling the ringer **permanently**: Press the star key  **and hold**.

The  icon appears in the display.

To **activate**: Press the star key  **and hold**.

i



To cancel the ringer for the **current** call, press the display key **MENU** and then **Silent**.

Activating/deactivating advisory tones


The following advisory tones can be activated and deactivated individually (the default setting is On).

- ◆ **Key click**: Every key press is confirmed
- ◆ **Acknowledge tones**: Confirmation tone, Error tone, End-of-menu tone
- ◆ **Battery tone**: The batteries must be charged.


MENU; ↓ Audio Settings OK; ↓ Advisory Tones OK.

either ...	Activate/cancel key click:
<input type="text" value="Key Tones"/> <input type="button" value="OK"/>	Confirm (✓ = On).
or ...	Activate/cancel battery warning tone:
<input type="button" value="↓"/> <input type="text" value="Battery Low"/> <input type="button" value="OK"/>	Select the menu item and confirm.
<input type="button" value="↓"/> <input type="text" value="On"/> <input type="button" value="OK"/>	Select condition (Off, On, During Call) and confirm, e.g. On (checked ✓).
	Press the 'end call' key briefly to return to the previous menu level.
or ...	Activate/cancel confirmation tones:
<input type="button" value="↓"/> <input type="text" value="Confirmation Tone"/> <input type="button" value="OK"/>	Select the menu item and confirm (✓ = On).
... then	
	Long press (back to idle status).

Restoring the handset factory settings

You can reset settings and changes you have made. Entries in the directory, the calls list and the speed dial list and the handset's registration on the base will be retained. Press the 'end call' key  to cancel the reset.

MENU; **Handset Settings OK;** **Reset Handset OK.**

<input type="button" value="OK"/>	Press the display key to confirm the prompt.
	Long press (back to idle status).

Factory settings of the handset

Earpiece volume	1	page 20
Handsfree volume	3	page 20
Ringer volume	5	page 20
Ringer melody	1	page 20
Auto answer	activated	page 19
Battery tone/Key click/Confirmation tone	activated	page 20
display language	English	page 8
Alarm clock/appointment	deactivated	page 11/ page 12
Appointment name	deleted	page 12
Last number redial list	empty	page 16
Room monitor/room monitor sensitivity	deactivated/high	page 18/ page 18

Appendix

Care and contact with liquid

Wipe the base and handset with a **damp** cloth (use no solvent) or an antistatic cloth. **Never** use a dry cloth. This can cause static.

If the handset should come into contact with liquid, **on no account switch the device on. Remove all batteries immediately.**

Allow the liquid to drain out of the device, and then pat all parts of the device dry.

Keep the handset with the batteries removed in a warm, dry place for at least 72 hours. In many cases, you will then be able to use it again.

Service (Customer Care)

Our **online support** on the Internet:

www.my-siemens.com/customer-care

If you need any repair work, or have a guarantee claim to submit, our

Service-Center Ireland 18 50 77 72 77

will give you quick and reliable assistance. Keep your till receipt handy.

You will find more service numbers in the section entitled "Service" at the end of this booklet.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Country-specific features have been taken into account.

The C2 handset is approved for use in Switzerland and throughout the EU.

The CE mark certifies conformity of the device with the essential requirements of the R&TTE directive.

Excerpt from the original declaration

"We, Siemens AG, declare that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with the registration number "Q810820M" in compliance with ANNEX V of the R&TTE Directive 99/05/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured"

Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need a copy of the original DoC can be made available via the company hotline.

 **0682**

Specifications

Recommended batteries: Nickel-metal-hydride (NiMH)

Sanyo Twicell 700; Sanyo Twicell 650; Panasonic 700 mAh; GP 700 mAh; YDT AAA SUPER 700; VARTA PhonePower AAA 700 mAh.

Handset operating times/charging times

 








 


Capacity	Standby time	Calling time	Charging time
700 mAh	approx. 170 hours (7 days)	approx. 13 hours	approx. 5 hours

These operating and charging times apply only when using the recommended batteries.

Character set chart




 

Standard characters

Press the relevant key repeatedly or hold it down

	1 x	2 x	3 x	4 x	5 x	6 x	7 x	8 x	9 x	10 x	11 x	12 x	13 x	14 x
	Space	1	€	£	\$	¥	¤							
	a	b	c	2	ä	á	à	â	ã	ç				
	d	e	f	3	ë	é	è	ê						
	g	h	i	4	ï	í	ì	î						
	j	k	l	5										
	m	n	o	6	ö	ñ	ó	ò	ô	õ				
	p	q	r	s	7	ß								
	t	u	v	8	ü	ú	ù	û						
	w	x	y	z	9	ÿ	ý	æ	ø	å				
	.	,	?	!	0	+	-	:	;	ı	ı	ı	ı	ı
	Abc-> abc	abc-> 123	*	/	()	<	=	>	%				
	#	@	\	&	§									


Creating and editing text (without predictive text)

You can create and edit text in a number of ways:


 
- ◆ The cursor is controlled with  .
- ◆ Characters (to the left of the cursor) are deleted with .
- ◆ Characters are added to the left of the cursor.
- ◆ To switch from upper case to lower case letters, press  before you enter the letter. Pressing  again switches from lower case letters to digits. Press again to return to upper case letters.

Predictive text

The EATONI predictive text helps you to write names (Directory, Speed Dial List). Each key between **0+** and **9WXYZ** is assigned **several letters and characters** which all appear on a **selection line** immediately above the softkeys (beneath the text area) as soon as you press a key. When you are entering letters, the letter you are **most probably** looking for is **greyed**. This letter is at the beginning of the selection line and is transferred to the text area.

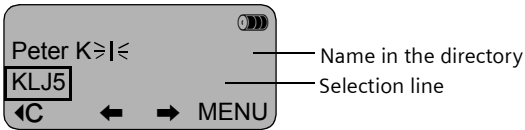

If this letter is the one you want, confirm it by pressing the next key. If the letter selected by the EATONI is not the one you want, then press the **hash key** **#->** repeatedly until the required letter appears greyed in the display line and is transferred to the text area. To write an "@", give the hash key **#->** one long and one short press.


	Pressing the star key for approx. 2 seconds switches from abc mode to Abc, from Abc to 123 and from 123 back to abc again (applies to text you subsequently enter).
	Goes to the next letter in the selection list (greyed).

Activating/deactivating predictive text

Predictive text is activated and deactivated according to specific functions.

Precondition: You are in the text input field (Directory, Speed Dial List).

MENU; ↓ Predictive Text OK (✓ = On);

Give the  'end call' key a **short press** to return to the text field. Now enter your text.

Warranty Certificate Ireland

- ◆ Without prejudice to any claim the user (customer) may have in relation to the dealer or retailer, the customer shall be granted a manufacturer's Guarantee under the conditions set out below:
- ◆ In the case of new devices and their components exhibiting defects resulting from manufacturing and/or material faults within 24 months of purchase, Siemens shall, at its own option and free of charge, either replace the device with another device reflecting the current state of the art, or repair the said device. In respect of parts subject to wear and tear (including but not limited to, batteries, keypads, casing), this warranty shall be valid for six months from the date of purchase.
- ◆ This Guarantee shall be invalid if the device defect is attributable to improper care or use and/or failure to comply with information contained in the user manuals. In particular claims under the Guarantee cannot be made if:
 - The device is opened (this is classed as third party intervention)
 - Repairs or other work done by persons not authorised by Siemens.
 - Components on the printed circuit board are manipulated
 - The software is manipulated
 - Defects or damage caused by dropping, breaking, lightning or ingress of moisture. This also applies if defects or damage was caused by mechanical, chemical, radio interference or thermal factors (e.g.: microwave, sauna etc.)
 - Devices fitted with accessories not authorised by Siemens
- ◆ This Guarantee shall not apply to or extend to services performed by the authorised dealer or the customer themselves (e.g. installation, configuration, software downloads). User manuals and any software supplied on a separate data medium shall be excluded from the Guarantee.
- ◆ The purchase receipt, together with the date of purchase, shall be required as evidence for invoking the Guarantee. Claims under the Guarantee must be submitted within two months of the Guarantee default becoming evident.
- ◆ Ownership of devices or components replaced by and returned to Siemens shall vest in Siemens.
- ◆ This Guarantee shall apply to new devices purchased in the European Union. For Products sold in the Republic of Ireland the Guarantee is issued by Siemens Ireland Limited, Ballymoss Road, Sandyford Industrial Estate, Dublin 18 - The Republic of Ireland.
- ◆ Any other claims resulting out of or in connection with the device shall be excluded from this Guarantee. Nothing in this Guarantee shall attempt to limit or exclude a Customers Statutory Rights, nor the manufacturer's liability for death or personal injury resulting from its negligence.
- ◆ The duration of the Guarantee shall not be extended by services rendered under the terms of the Guarantee.
- ◆ Insofar as no Guarantee default exists, Siemens reserves the right to charge the customer for replacement or repair.
- ◆ The above provisions does not imply a change in the burden of proof to the detriment of the customer.

To invoke this Guarantee, please contact the Siemens helpdesk on 1850 777 277. This number is also to be found in the accompanying user guide.

Index

A

Acknowledge tones 20
 Activating, refer to the relevant function
 Advisory tones 20
 Alarm clock 11
 Answer (auto) 19
 Answering a call 13
 Appointment 12
 Auto answer 19

B

Batteries 5, 6, 7, 23
 Battery tone 20
 Belt clip 9
 Best base 8, 19

C

Call (internal, external) 13
 Call waiting (internal call) 17
 Call-by-Call numbers 14
 Calls list 17
 Care of the telephone 22
 Character set (Chart) 23
 Charge indicator (batteries) 7
 Charge status 2
 Connect 17
 Consultation call (internal) 17
 Copy/store a number 14, 16
 Customer Care (Service) 22
 Customer service 22

D

Date setting 10
 Deactivating, refer to the relevant function
 Dialling pause 13
 Directory 14, 16
 Display 8, 9
 12/24 hour 11

E

Earpiece mode 2
 Earpiece volume 20
 Ending/transferring a call 13, 17

F

Factory settings 21

G

Group call 13

H

Handset

activate/deactivate 9
 change to another base 8
 muting 14
 operating and charging times 23
 preparing to use 6
 restore factory settings/reset 21
 settings 19
 use as room monitor 17

Handset at a glance 2

Handset charging times 23

Handsfree

activate/deactivate 13
 volume 14, 20

Hearing aids 5

I

Internal consultation calls 17

Internal dialling 13

K

Keys 2, 10, 13
 key click 20
 key press (confirmation tone) 20
 keypad lock 9

L

Language, see Display

Last number redial 16

delete list 17

list 17

List (calls, messages, last number redial) 17

Lock (keypad) 9

Loudspeaker volume 20

Lower/upper case 2, 23

 
- M**
- Making calls 13
 - Medical appliances 5
 - Melody 20
 - Menu
 - end tone 20
 - guidance through the menu 9
 - Messages list 17
 - Microphone 2
 - Muting (handset) 14
- N**
- Network provider 14
 - Noise level (room monitor) 18
 - Number, see Directory
- O**
- Operating time
 - handset 23
 - in Walk and Talk mode 19
 - room monitor 18
 - Operation (preparing to use your phone) 6
- P**
- Pack contents 6
 - PIN 8
 - Power supply unit 5
 - Predictive text 24
- R**
- Registering a handset 7
 - Removing protective film 6
 - Reset, see Factory settings 21
 - Ringer 20
 - Room monitor 18
- S**
- Safety precautions 5
 - Select/change base 8
 - Send (directory entry) 16
 - Sensitivity (room monitor) 18
 - Service 22
 - Setting
 - appointment 12
 - date 10
 - display language 8
 - time/alarm clock 10
 - volume 20
 - Signal tone, see Advisory tones
 - Specifications 23
 - Speed dial list 14
 - storing numbers 14
 - Standard characters (Chart) 23
 - Star key 20
- T**
- Time functions/Time mode 10, 11
 - Time setting 10
 - Tone (battery, error, confirmation) 20
- U**
- Upper/lower case 2, 23
- V**
- VIP (directory entry) 16
 - Volume
 - handsfree/earpiece mode 14, 20
 - loudspeaker 20
 - ringer 20
- W**
- Wait melody 14
 - Walk and Talk 19
 - Warning tone, see Advisory tones
 - Warranty 25
 - Writing digits 2, 23

Service

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

www.my-siemens.com/customer-care.

Abu Dhabi	0 26 42 38 00	Luxembourg	43 84 33 99
Argentina	0 80 08 88 98 78	Macedonia	02 13 14 84
Australia	18 00 62 24 14	Malaysia	03 21 63 11 18
Austria	05 17 07 50 04	Malta	00 35 32 14 94 06 32
Bahrain	40 42 34	Mauritius	2 11 62 13
Bangladesh	0 17 52 74 47	Mexico	01 80 07 11 00 03
Belgium	0 78 15 22 21	Morocco	22 66 92 09
Bosnia Herzegovina	0 33 27 66 49	Netherlands	0900-3333102
Brazil	0 80 07 07 12 48	New Zealand	08 00 27 43 63
Brunei	02 43 08 01	Norway	22 70 84 00
Bulgaria	02 73 94 88	Oman	79 10 12
Cambodia	12 80 05 00	Pakistan	02 15 66 22 00
Canada	1 88 87 77 02 11	Philippines	0 27 57 11 18
China	0 21 50 31 81 49	Poland	08 01 30 00 30
Croatia	0 16 10 53 81	Portugal	8 00 85 32 04
Czech Republic	02 33 03 27 27	Qatar	04 32 20 10
Denmark	35 25 86 00	Romania	02 12 04 60 00
Dubai	0 43 96 64 33	Russia	(800) 200 10 10
Egypt	0 23 33 41 11	Saudi Arabia	0 22 26 00 43
Estonia	06 30 47 97	Serbia	01 13 22 84 85
Finland	09 22 94 37 00	Singapore	62 27 11 18
France	01 56 38 42 00	Slovak Republic	02 59 68 22 66
Germany	01805 333 222	Slovenia	0 14 74 63 36
Greece	0 80 11 11 11 16	South Africa	08 60 10 11 57
Hong Kong	28 61 11 18	Spain	9 02 11 50 61
Hungary	06 14 71 24 44	Sweden	0 87 50 99 11
Iceland	5 11 30 00	Switzerland	08 48 21 20 00
India	01 13 73 85 89 - 98	Taiwan	02 25 18 65 04
Indonesia	0 21 46 82 60 81	Thailand	0 22 68 11 18
Ireland	18 50 77 72 77	Tunisia	0 71 86 19 02
Italy	02 66 76 44 00	Turkey	0 21 65 79 71 00
Ivory Coast	80 00 03 33	Ukraine	8 80 05 01 00 00
Jordan	0 64 39 86 42	United Arab Emirates	0 43 31 95 78
Kenya	2 72 37 17	United Kingdom	0 87 05 33 44 11
Kuwait	2 45 41 78	USA	1 88 87 77 02 11
Latvia	7 50 11 14	Vietnam	45 63 22 44
Lebanon	01 44 30 43		
Libya	02 13 50 28 82		
Lithuania	8 22 74 20 10		



A31008- C002- B001- 2- QD19

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2003
All rights reserved. Subject to availability.
Right of modification reserved.
Printed in Germany (02/2003).

Siemens Aktiengesellschaft
<http://www.my-siemens.com>

No A31008-C002-B001-2-QD19