

Index

A

Access codes • 22
Accessories • 9
Active Flip (6-0) • 78
Alarm (7-3) • 79
Alert Type (5-3) • 71
Any-key Answer (6-4) • 75
Auto Answer (6-8) • 77
Auto Redial (6-7) • 77

B

Backlight • 14; 76
Barring
calls (9-2) • 88
password • 25
Batteries
charging • 19
low battery indicator • 20
precautions • 98
Broadcast (3-5) • 67
Browsing the menu map • 32

C

Caller ID (6-9) • 77
Calls
answering • 29; 75
answering a second
call • 48
barring • 88
cost (2-5) • 62
dialled (2-3) • 61
diverting (9-1) • 86
emergency • 8; 103
ending • 27
holding • 47; 90
international • 26
making • 15; 26
missed • 30; 60
multiparty • 49
received (2-2) • 60
records (2) • 60
time (2-4) • 61
via the phonebook • 27
waiting (9-3) • 90
Care • 102

Changing

passwords (8-4) • 84
PIN (8-2) • 83
PIN2 (8-7) • 85
Characters
changing case • 38
entering • 37
Charging batteries • 19
Clock Settings (7) • 79
Closed User Group (9-6) • 93
Conference calls
• See Multiparty calls
Connect to Voice
Mail (1-1) • 58
Copying phonebook
numbers • 42
Cost of calls • 62
CUG • 93

D

Date setting (7-2) • 79
Deleting
all voice dial
numbers • 44
memos • 70
missed calls • 31
one voice dial
number • 43
phonebook numbers • 41
voice dial names • 41
Dialled Calls (2-3) • 61
Dialling • 26
voice • 27; 42; 43
Display • 12
icons • 13
setting the language • 34
Diverting calls (9-1) • 86
DTMF dialling • 51

E

Earphone • 25
Earpiece
adjusting the volume • 28
Emergency calls • 8; 103
Error Tone (5-6) • 73

F

FDN Mode (8-6) • 84
Fixed Dial Number
mode • 84
Functions
selecting • 32

G

Greeting Message (6-1) • 74

H

Holding calls • 47; 90

I

Icons
description • 13
text message • 51
Identifying a caller • 77

K

Key tones
adjusting the volume • 28
muting • 51
selecting • 72
sending • 51
Keypad Tone (5-4) • 72
Keys
location • 10
purpose • 11

L

Language (6-3) • 75
setting the text • 34
Last number redialling • 27
Length of calls • 61
Letters
changing case • 38
entering • 37
Line Identification (9-5) • 93
Locking
phone (8-3) • 83
SIM card (8-5) • 84
Low battery indicator • 20

M

Maintenance • 102
Memos
deleting (4-3/4) • 70
recording (4-1) • 69
replaying (4-2) • 70
Menu map • 54
browsing • 32
numbers • 53
Message Tone (5-5) • 72
Messages
broadcast (3-5) • 67
greeting (6-1) • 74
preset (3-3) • 65
reading (3-1) • 63
setup (3-4) • 66
text • 63
writing (3-2) • 64
Microphone mute • 45
Minute Minder (5-7) • 73
Missed calls (2-1) • 60
deleting • 31
editing the number • 31
viewing • 30; 60
Multiparty calls
dropping a
participant • 50
making • 49
private conversation • 49
Mute
key tones • 51
microphone • 45

N

Names
changing case • 38
entering • 37
searching/dialling • 38; 46
storing in the
phonebook • 36
Network Selection (9-4) • 91
Network Services (9) • 86

Index

Numbers

- editing missed call • 31
- recording voice dial • 43
- recording your own • 74
- searching/dialling • 38; 46
- storing in the
 - phonebook • 36
- voice dialling • 42; 43

O

Options

- selecting • 32
- Own Number (6-2) • 74

P

Password

- barring • 25
- changing (8-4) • 84
- phone • 22

Pasting phonebook

- numbers • 41

Personal Identification

- Number • See PIN

Personal Unblocking

- Key • 23

Phone

- Lock (8-3) • 83
- password • 22
- Settings (6) • 74

Phonebook • 36

- copying numbers • 42
- deleting recorded
 - names • 44
- dialling • 38
- editing numbers • 41
- erasing numbers • 41
- making calls • 27
- pasting numbers • 41
- playing recorded
 - names • 44
- searching • 38
- storing numbers/
 - names • 36
- voice dialling • 42
- voice recording • 40

PIN • 23

- changing (8-2) • 83
- checking (8-1) • 82

PIN2 • 24

- changing (8-7) • 85

Playing back

- voice dial names • 40
- voice dial numbers • 44

Pocket attachment • 25

Preset Message

- List (3-3) • 65

Problem solving • 95

PUK • 23

PUK2 • 24

Q

- Quick Access (1) • 58

R

Recording

- memos • 69
- voice dial names • 41
- voice dial numbers • 43
- your own number • 74

Records

- call (2) • 60

Redialling

- automatically (6-7) • 77
- last number • 27

Replaying memos (4-2) • 70

Reset Settings (6-*) • 78

Ring Tone (5-1) • 71

Ring Volume (5-2) • 71

Roaming • 91

S

Safety

- batteries • 98
- information • 100
- precautions • 7

Security (8) • 82

Selecting functions/

- options • 32

Sending key tones • 51

Service Directory (1-3) • 59

Service light • 14; 76

Setting

- alarm (7-3) • 79
- date (7-2) • 79
- text language • 34
- time (7-1) • 79

Settings

- resetting (6-*) • 78

Setup (3-4) • 66

SIM card

- installing • 17
- locking (8-5) • 84
- precautions • 17

SIM Lock (8-5) • 84

SMS

- setup (3-4) • 66
- text message icon • 51

Soft keys • 52

Solving problems • 95

Sound Settings (5) • 71

Switching on/off • 20

T

Text language

- selecting • 34; 75

Text messages • 63

- broadcasting (3-5) • 67

icon • 51

- preset (3-3) • 65

- reading (3-1) • 63

- setup (3-4) • 66

- writing (3-2) • 64

Time

- setting (7-1) • 79
- world (7-4) • 81

Timing a call • 73

Tone

- connect (5-8) • 73
- error (5-6) • 73
- keypad (5-4) • 72
- message (5-5) • 72
- ring (5-1) • 71

Travel adapter • 18

U

- User groups • 93

V

Voice dialling • 27; 43

- deleting all numbers • 44
- deleting one number • 43
- deleting recorded
 - names • 41
- playing recorded
 - names • 44
- playing recorded
 - numbers • 44
- recording names • 40
- recording numbers • 43

Voice language

- selecting • 75

Voice mail

- connecting to (1-1) • 58
- server number (1-2) • 58

Service Directory

- (1-3) • 59

Voice Memo (4) • 69

Voice Memo Delete

- All (4-4) • 70

Voice Memo Delete

- One (4-3) • 70

Voice Memo

- Record (4-1) • 69

Voice Memo

- Replay (4-2) • 70

Voice Server

- Number (1-2) • 58

Volume

- adjusting • 28
- selecting the ring
 - (5-2) • 71

W


World Time (7-4) • 81


Write Messages (3-2) • 64

Installing the Flip Cover

You can install the flip cover if the cover is released from the phone accidentally or deliberately.

1. Insert one end of the flip cover into the left tab on the bottom of the phone.
2. While pushing the tab with a tool like a pen, insert the other end of the cover.

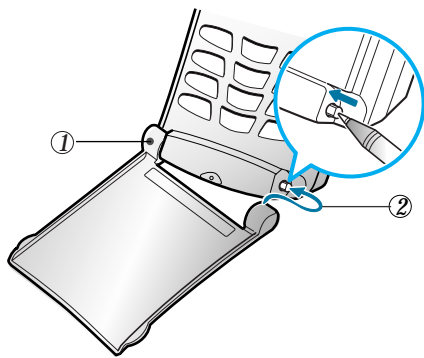



SGH-2100 GSM Telephone
Quick Reference Card

How to Access the Menu Function	<ol style="list-style-type: none">1 Press the Menu soft key.2 Scroll with the soft key (or " or " on the left side) through the list of menus until you reach the required menu.3 Press the Select soft key.4 Scroll with the soft key through the list of setting options until the required option is selected.5 Press the OK soft key to confirm.
---------------------------------	---

• Each of the two soft keys performs the function indicated by the text above it (bottom line in the display).



Switch On/Off	Press and hold .
Make a Call	<i>(Direct Call)</i> <ol style="list-style-type: none">1 Key in the number.2 Press . <i>(Voice Dial)</i> Provided that the name is recorded and the Active Flip menu option Active Flip menu option (-0-) is set to ON : <ol style="list-style-type: none">1 Open the flip cover.2 Say the name.
End a Call	Briefly press .

Search for a Number in the PhoneBook	<ol style="list-style-type: none">1 Press the PhoneBook soft key.2 Enter the start of the name.3 Press the Search soft key.4 To scroll through the names, press the soft key.5 To make a call, press .
Record a Name for Voice Dialling	<ol style="list-style-type: none">1 Press the PhoneBook soft key.2 Press the Voice soft key.3 Select the Record menu.4 Record the name and follow the instructions.
Store Numbers in the PhoneBook	<ol style="list-style-type: none">1 Type in the number.2 Press the Save soft key.3 Enter the name.4 Press the OK soft key.5 If necessary, change the location.6 Press the OK soft key.
Adjust the Volume	Press " or " on the left side of the phone.
Answer a Call	Open the flip cover or Press .